INSTRUCTION MANUAL

3LT Interior Wall Sconce

Home Depot SKU 892-556 (UPC 6940500304168)

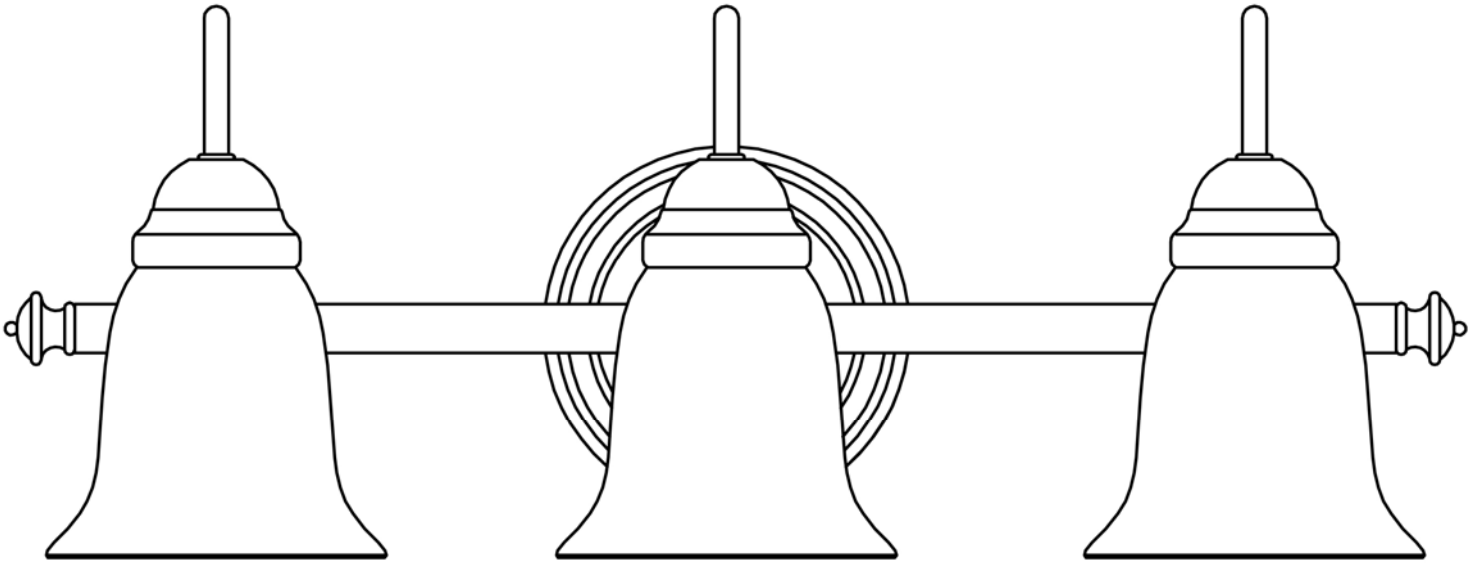

Thank you for purchasing this Commercial Electric interior wall sconce. This product has been manufactured with the highest standards of safety and quality.

FEATURES:

1. Three-light interior sconce.

2. This fixture has been engineered to safely use three 60 watt medium base incandescent light bulbs (do not exceed 60 watts each) (not included).

3. For energy savings, this fixture has been engineered to safely use three standard base compact fluorescent light bulbs (for equivalent light output, do not exceed 15 watts each) (not included).

QUESTIONS, PROBLEMS, MISSING PARTS:

Before returning to your local The Home Depot, please call our Customer Service Team at 1-877-527-0313 or visit www.homedepot.com.com. Please reference your SKU 892-556 or UPC 6940500304168.

CAUTION:

1. Before starting installation of this fixture or removal of a previous fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box.

2. CONSULT A QUALIFIED ELECTRICIAN IF YOU HAVE ANY ELECTRICAL QUESTIONS.

3. If you have any non-electrical questions about this fixture, please contact our Customer Service Team at 1-877-527-0313 or visit www.homedepot.com. Please reference your SKU 892-556 or UPC 6940500304168.

4. Keep your receipt and these Instructions for Proof of Purchase.

TOOLS REQUIRED FOR ASSEMBLY & INSTALLATION (not included):

3 Light Bulbs
(60 watt maximum)
(or CFL equivalent)

Safety Goggles

Ladder

Gloves

Wire Strippers

Flathead Screwdriver

Phillips Screwdriver

Electrical Tape

Wire Cutters

PARTS INCLUDED FOR ASSEMBLY (parts are not to scale):

2ea Finial (#4)

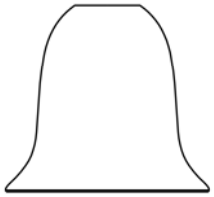

3ea Shades (#6)

3ea Socket Rings (#7)

ASSEMBLY INSTRUCTIONS:

1. Carefully unpack the fixture. Lay out all parts on a clean surface.

2. Screw the two Finials (#4) onto each end of the Tube (#3).

3. Unscrew the Socket Rings (#7) from the Sockets (#5). Place the Shades (#6) over the Sockets (#5). Screw the Socket Rings (#7) onto the Sockets (#5) to secure the Shades (#6).

4. Install three 60 watt medium base incandescent light Bulbs (#8) (not included) or three equivalent standard base compact fluorescent light bulbs (not included) in the Sockets (#5) in the fixture.

ASSEMBLY:

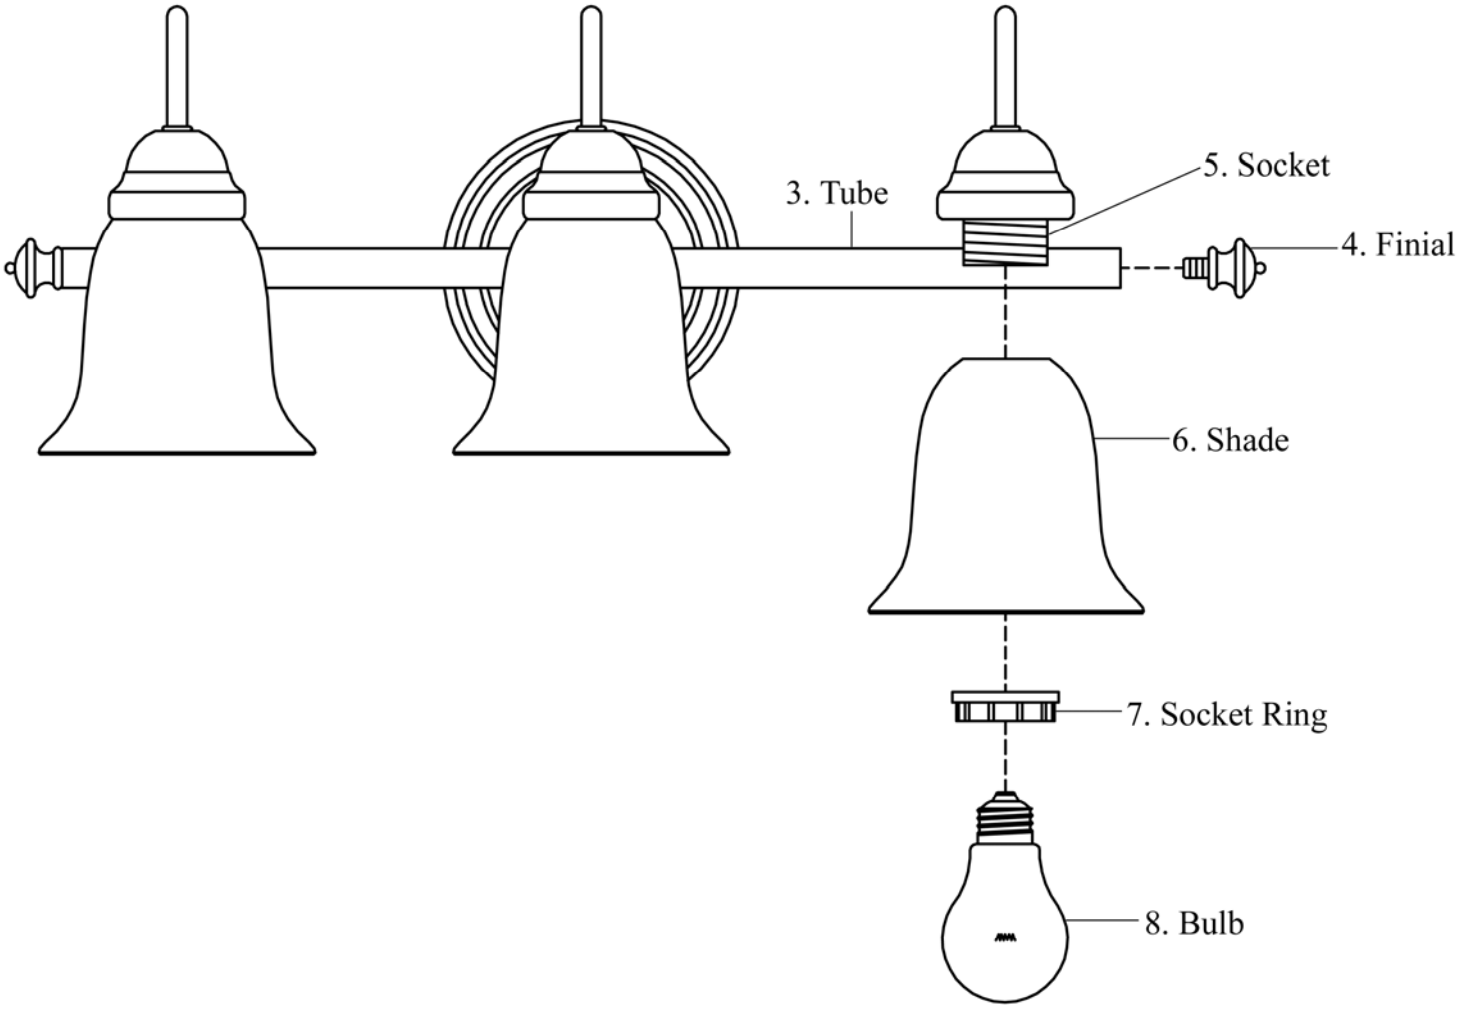

PARTS INCLUDED FOR INSTALLATION (parts are not to scale):

2ea Lock Nuts (#2)

3ea Wire Connectors (#11)

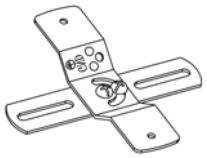

1ea Cross Bar (#12)

1ea Ground Screw (#13)

2ea Outlet Box Screws (#14)



2ea Mounting Screws (#15)

INSTALLATION INSTRUCTIONS:

1. Screw the two Mounting Screws (#15) into the Cross Bar (#12). Mount the Cross Bar (#12) to the Outlet Box (#10) using the two Outlet Box Screws (#14). [Make sure the threads of the Mounting Screws (#15) are facing outside when the Cross Bar (#12) is attached to the Outlet Box (#10).]

2. Wrap the ground wire from the fixture around the Ground Screw (#13) on the Cross Bar (#12), and then connect the ground wire from the fixture to the ground wire from the Outlet Box (#10). Connect the white wire from the fixture to the white wire (neutral wire) from the Outlet Box (#10). Connect the black wire from the fixture to the black wire (live wire) from the Outlet Box (#10). Cover the three connections using the three Wire Connectors (#11). Wrap the three wire connections with electrical tape for a more secure connection. Position the wires back inside the Outlet Box (#10). *Note: If you have electrical questions, consult your local electrical code for approved grounding methods.*

3. Place the fixture body to the wall by aligning the protruding Mounting Screws (#15) all the way through the Wall Plate (#1). Tighten the fixture to the wall by screwing the two Lock Nuts (#2) onto the two protruding Mounting Screws (#15).

4. Installation is complete. Turn on the power at the circuit breaker or fuse box. Turn the light switch on to activate the fixture.

INSTALLATION:

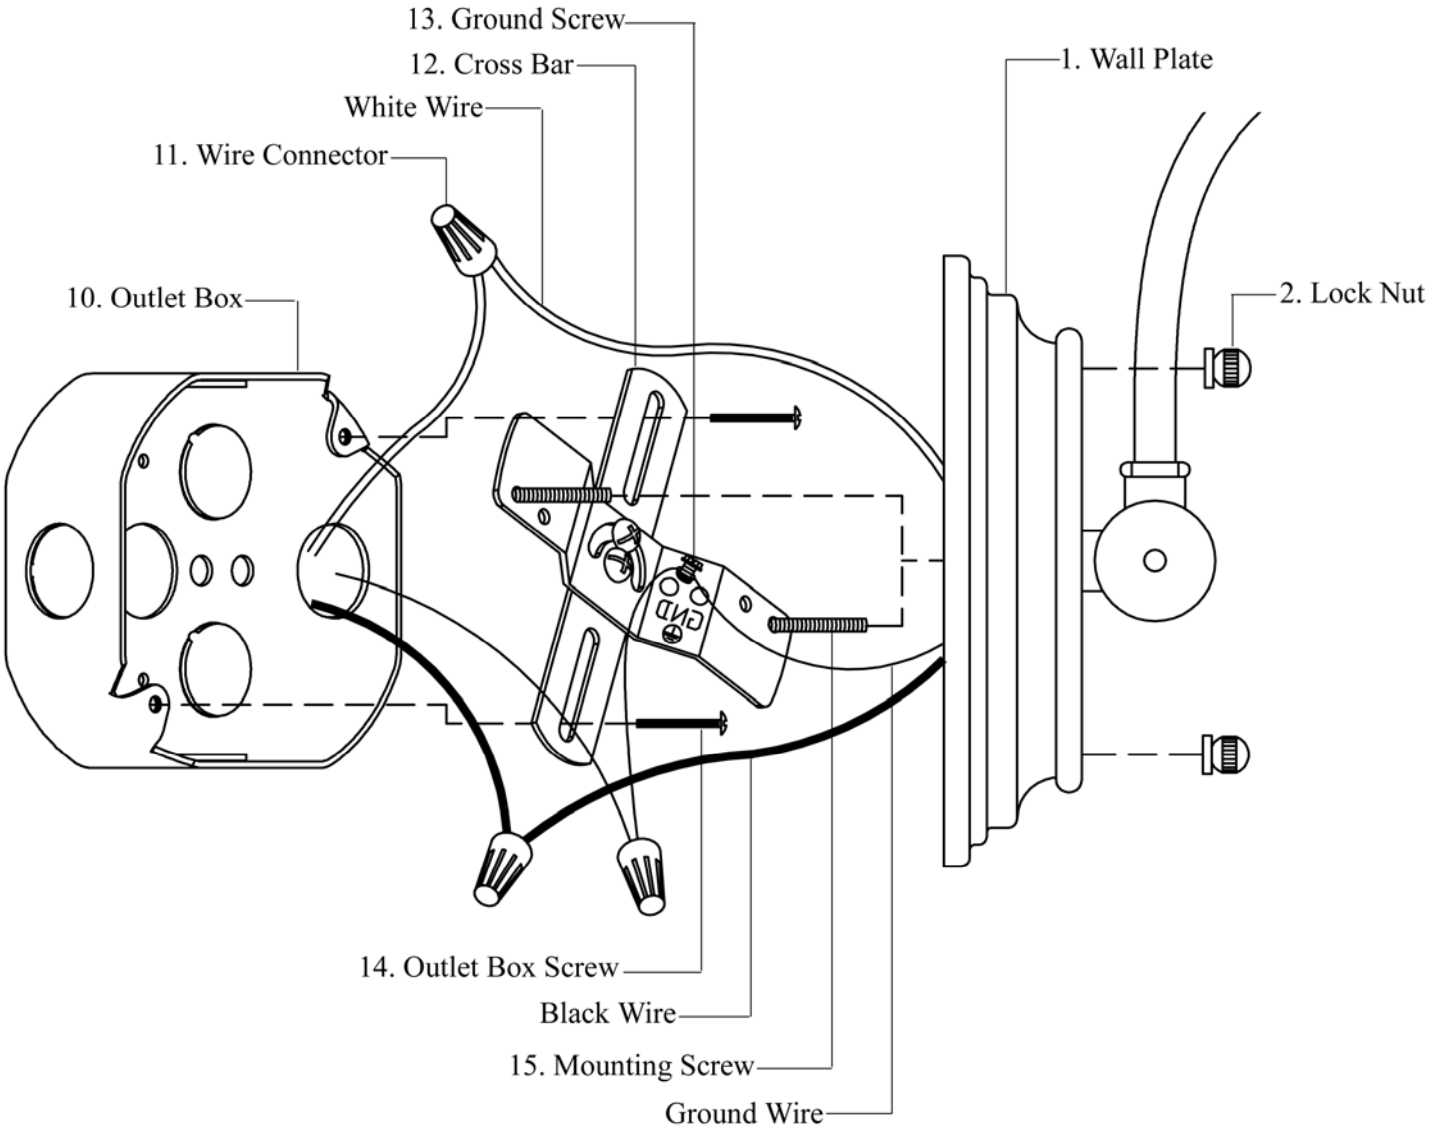

TROUBLESHOOTING:

Problem	Possible Cause	Corrective Action
Light bulb will not illuminate.	1. Light bulb is burned out.	1. Replace light bulb.
	2. Power is off.	2. Make sure power supply is on.
	3. Faulty wire connection.	3. Check wiring.
	4. Faulty switch.	4. Test or replace switch.
Fuse blows or circuit breaker trips when light bulb is illuminated.	Crossed wires or power wire is grounding out.	Check wire connections.

PRODUCT MAINTENANCE:

1. To clean the outside of the fixture, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the glass and surface of the fixture.

2. To clean the inside of the fixture, first disconnect power to the fixture by turning off the circuit breaker or by removing the fuse at the fuse box. Next, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the inside glass and interior surface of the fixture.

3. Do not use any cleaners with chemicals, solvents or harsh abrasives. Use only a dry soft cloth to dust or wipe carefully.

LIMITED WARRANTY

The manufacturer warrants this lighting fixture to be free from defects in materials and workmanship for a period of five (5) years from date of purchase. This warranty applies only to the original consumer purchaser and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alterations, neglect or mishandling. This warranty shall not apply to any product that is found to have been improperly installed, set-up, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, or faulty installation, or any other failure not relating to faulty material or workmanship. This warranty shall not apply to the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear. **The manufacturer does not warrant and specially disclaims any warranty, whether express or implied, of fitness for a particular purpose, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss or damage, including but not limited to any labor / expense costs involved in the replacement or repair of said product.**